

XR100/XR500 or XR150/XR350/XR550 Arming and Disarming

Disarming the Alarm System


1. Press **CMD** until **ARM DISARM** displays.
2. Select **DISARM**, enter your user code and press **CMD**.
3. At **ALL? NO YES**, if you select **NO**, the keypad displays the name of each area followed by **NO YES**. Select **YES** or **NO** to disarm area(s) of your choice.

Arming the Alarm System


1. Press **CMD** until **ARM DISARM** displays.
2. Select **ARM**, enter your user code if a closing code is required and press **CMD**.
3. At **ALL? NO YES**, if you select **NO**, the keypad displays the name of each area followed by **NO YES**. Select **YES** or **NO** to arm the area(s) of your choice.
4. **SYSTEM ON** or **ALL SYSTEM ON** displays.

Note: **SYSTEM ON** means at least one area in the system is armed.

ALL SYSTEM ON means all areas in the system are armed. The keypad begins counting down the exit time.

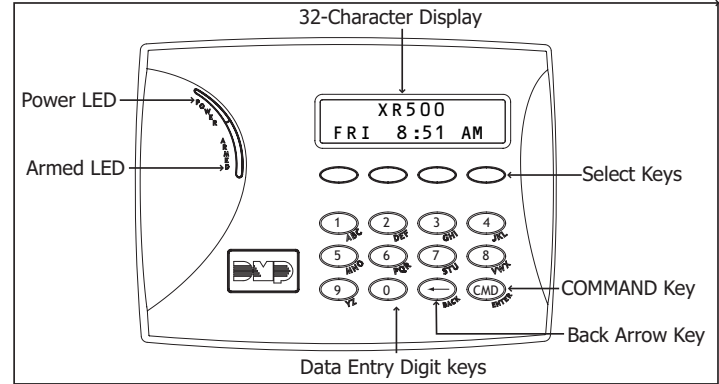


Keypad Layout and Function Keys

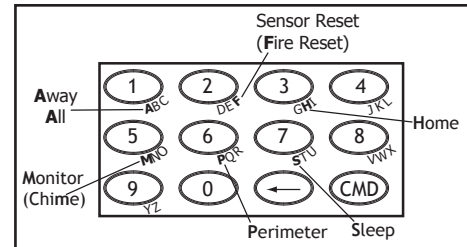


Keypad Shortcut Keys



Disarming Steps

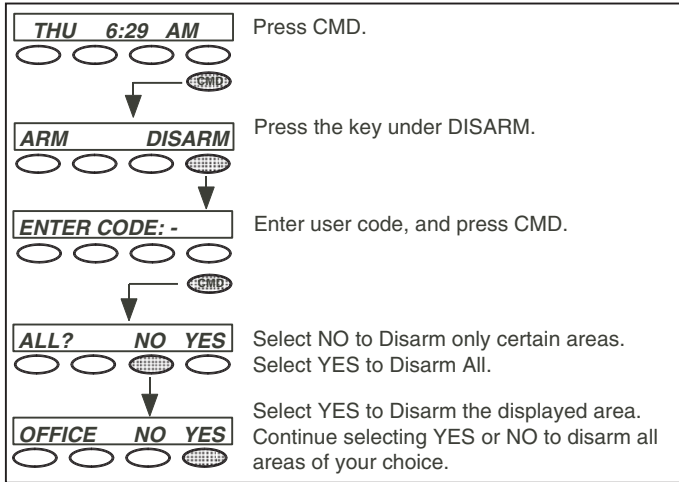

Arming Steps

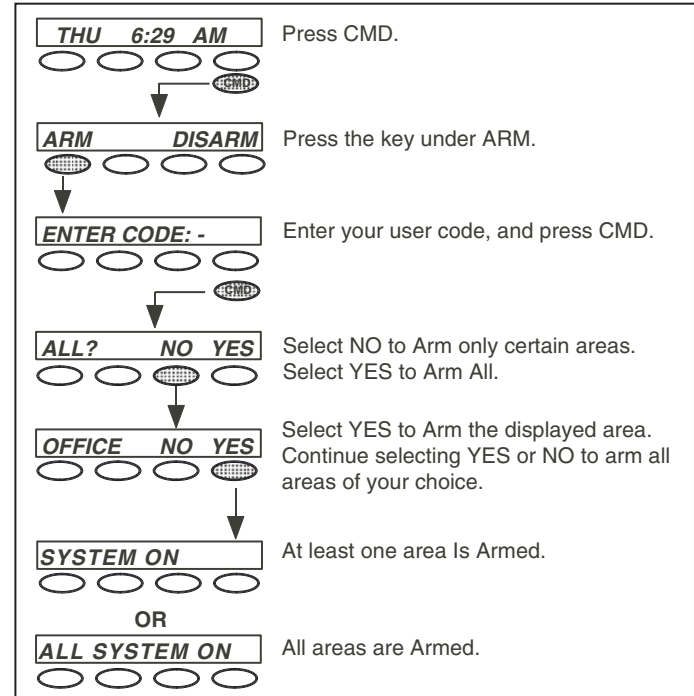

800-641-4282

www.dmp.com

Designed, Engineered and
Assembled in the USA

INTRUSION • FIRE • ACCESS • NETWORKS

2500 North Partnership Boulevard

Springfield, Missouri 65803-8877

